



Washing Machine

Quick fixes for common problems

Problem: Washing machine won't run

Cause:

No power is reaching the outlet
Safety switch is tripped
Inlet hose valve isn't open

Solution:

Check the fuse box/circuit breaker
Distribute the clothes evenly and make sure the lid is closed
Open the inlet valve

Problem: Washing machine doesn't fill with water

Cause:

Filters are clogged
A kink in one of the hoses
Timer is not set

Solution:

Check and clean the inlet hose filters
Straighten the water supply hoses
Turn the timer slightly or press the buttons firmly

Problem: Water doesn't stop running

Cause:

Overflow switch hose is disconnected
Overflow switch is defective
Timer is defective

Solution:

Replace the water hose
Check the switch and replace it
Replace the timer or call a qualified professional

Problem: Tub fills with water but machine doesn't run

Cause:

Lid safety switch is tripped
Too much laundry in the tub

Solution:

Make sure the lid is closed. If it is, check the switch.
Take some things out and wait 15 minutes for the motor to reset



Electric Clothes Dryer

Quick fixes for common problems

Problem: Can't turn the dryer on

Cause:

No power is reaching the outlet
Door switch is damaged
Defect in the centrifugal switch

Solution:

Check the fuse box/circuit breaker
Check the switch and replace it if necessary
Check the switch and replace it if necessary

Problem: Motor runs, but the drum doesn't turn

Cause:

Drum is blocked
Drive belt is broken
Idler wheel is broken
Support wheel is worn

Solution:

Open the unit and look for obstructions around the drum
Replace the belt
Check the assembly and replace it if necessary
Check the wheel and replace it if necessary

Problem: Drum turns, but nothing gets dry

Cause:

Clog in the lint trap
Safety thermostat is defective
Defect in the heating element
Timer is defective

Solution:

Clean the trap and the exhaust vent
Check the thermostat and replace it
Check the element and replace it
Check the timer and replace it

Problem: It takes too long to dry a load

Cause:

Clog in the lint trap or exhaust vent
Dryer is overloaded
Clothes are too wet

Solution:

Clean the trap and exhaust vent
Reduce the load and try again
Reduce the load